

▶ SAFETY AND PRECAUTIONS

1. Before plugging in the appliance, check whether the voltage indicated on the label corresponds to the local voltages.
2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
3. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water may cause a hazard even when the hairdryer is switched off.
4. For additional protection, the installation of a residual current device RCD with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom.
5. WARNING- Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
6. Do not use the hair dryer for any other purposes than those described in this instruction manual.
7. This appliance can be used by children aged from 8 years and above and persons with recued physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a sage way, and understand the hazards involved.
8. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
9. Do not use outdoors. Always unplug the hair dryer from the power supply when not in use and before cleaning.
10. To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
11. Do not spray aerosol products when the hair dryer is in operation.
12. Do not leave the hair dryer switched on when not in use.
13. Do not use other attachments than which supplied.
14. The air inlet and outlet openings should never be obstructed to prevent the appliance from getting too hot.
15. If however, the airflow is inadvertently obstructed during use, the built-in thermal safety cut-off will automatically switch off the appliance. The hair dryer will switch on again automatically after cooling down for a few minutes .
16. Keep your hair away from the immediate vicinity of inlet opening to prevent from being drawn in.
17. Store the appliance in a cool, dry place. Do not use it when there is water in your hands.
18. CLEANING: The appliance can be cleaned with a dry cloth. Remove the attachments from the appliance before cleaning them. Make sure the attachments are dry before using or storing them. Never rinse the appliance with water.

▶ OVERVIEW



- A. Controllable Air Cushion Massage Comb**
1. With double-sided controllable blow dry function, button on the comb can adjust the airflow direction.
 2. Turn down the airflow of the airstyler, attachable oval comb massages scalp, smooths, fluffy hair, improves blood circulation and keeps scalp healthy.
- B. Coanda Smoothing Dryer**
1. The air vents blow in the direction of the brush tooth.
 2. Smooth and straightener all at once for a sleek blowout, smooths hair.
- C. Round Brush**
1. Smooths hair, defrizzes, and adds volume & bounce, make hair more voluminous.
 2. Blow drying and styling at the same time.
 3. Creates smaller curls and solves tangled hair problems.

- D. Volumizing Brush**
1. Dual bristles oval brush smooths, defrizzes, and adds volume & bounce, make hair more voluminous.
 2. Blow drying and styling at the same time.
 3. Creates big curls and solves tangled hair problems.

- E. Auto-Wrap Curler Left**
1. Place a lock of hair near the curler and it automatically wraps, curls and sets.
 2. Style with air, not extreme heat-they automatically attract hair and wrap it around the rod using the Coanda effect. Includes two curlers to curl in different directions.

- F. Auto-Wrap CurlerRight**
1. Place a lock of hair near the curler and it automatically wraps, curls and sets.
 2. Style with air, not extreme heat-they automatically attract hair and wrap it around the rod using the Coanda effect. Includes two curlers to curl in different directions.

- G. Styling Concentrator**
1. Concentrates the airflow of the airstyler for easy styling to all hair type.
 2. Dry and style at the same time.

▶ HOW TO CURL YOUR HAIR

1. Apply heat protectant spray to protect your hair from damage caused by exposure to high temperatures and prevent it from becoming dry and frizzy. Spray it liberally all over your hair before curling. (To make the curl long lasting, you may also apply hair mousse before curling the hair.)
2. Split your hair into sections. Grab top layer of the hair and clip it on top of your head.
3. Wrap a small section of hair around the curling barrel. (Use safety gloves to avoid burning your hands)
4. Keep your hair wrapped around the curling barrel for 10 to 15 seconds. Afterward, press the cool shot button for around 5 seconds and let go of your hair to release the curl.
5. Continue curling small sections of your hair. If your hair is flat try pinning each curl with a bobby pin. Once your hair cools down remove the pins.
6. Once your hair is all curled and has cooled down, run your fingers through the curls a few times. You can also turn your head upside down and use your fingers to separate the curls.
7. Set your hair with hairspray for a stronger hold. To maintain tight curls, spray each curl individually. Choose a loose hold hairspray so your curls aren't too stiff and your hair doesn't feel too crunchy. Never apply hairspray to the curls while still wrapped around the iron. Combining the heat from the irons and the alcohol in the hairspray can damage your hair.

▶ OPERATION




The follow are the heat and air flow settings:

High	Medium
Airflow : Very high	Airflow : High Heat: Medium(90°C)
Heat : Very high (120°C)	Good for : Medium to normal hair
Good for : Thick, coarse, curly and wavy hair.	
Low	Cool
Airflow : Low Heat: Low(60°C)	Airflow : Low Heat: Very low (30°C)
Good for : Fine hair	Good for : Setting hair after a blow -dry

▶ HOW TO CHANGE ATTACHMENTS

On the back of handle, there are two buttons. The button "A" is for the accessories replacement. Pressing the button on the styler, then take the attachment out. It helps you to do curl, volumize, smooth, and dry hair style by attaching various attachments. Which is portable and effective, offers quick and simply style. The button "B" is for folding. Pressing the button, rotate to the left.

WARNING : Before change attachments, turn off the styler.
Note: During use, the attachments will get hot. To change to another attachment, wear the glove.

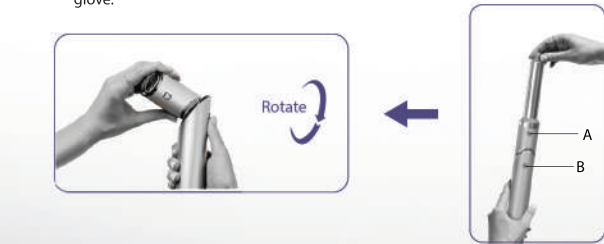

▶ Specifications :

- 7-In-1 Hair Multi-Styler
Model: F101
Voltage: 220-240V 50Hz
Power: 1200-1400W
Brushless motor : (110000RPM)
Weight: 515g
Exclusively distributed by R&P International Company Limited

